



## How To Change Compact Fan From Puller To Pusher

Step 1: Disconnect the power supply.  
Place the DC compact Fan on its back - (Step 1 Photo)

Step 2: Place two flat blade screwdrivers underneath the clip - (Step 2 Photo)  
Lift the screwdrivers up over the pin and push the clip off.  
Once the clip is removed, pull the impeller off the pin/shaft

Step 3: Flip the impeller over and line the key way back up - (Step 3 Photo).  
You will note that the impeller will now say "Pusher" and not "Puller"  
Push down firmly to engage the impeller onto the key way.

Step 4: Place the clip back into position and clip it back on - (Step 4 Photo)

Step 5: Reverse the polarity.

Step 6: Reconnect power and test.

Step 1



Step 2



Step 3



Key Way

Step 4

